WWW.BAMBI-AIR.CO.UK

BAMBI

ISO 9001 CERTIFIED
EXTERNALLY TESTED TÜV SÜD
MADE IN BRITAIN

Operating manual

MODELS: PT5, PT15, PT24, PTH24, PT50, PT90

Contents

01.	Introduction	03
02.	Range overview	04
03.	UK declaration of conformity	05
04.	EU declaration of conformity	06
05.	Warranty	07
06.	Preventative maintenance	07
07.	Technical specification	07
08.	Electrical connections	10
09.	Installation instructions	11
10.	Operation	12
11.	Routine maintenance	13
12.	PT pump spares list	14
13.	PT5 parts list	15
14.	PT15 / PT24 parts list	16
15.	PTH24 parts list	18
16.	PT50 parts list	20
17.	PT90 parts list	22
18.	Troubleshooting	24
19.	Wiring diagrams	25

01. Introduction

Your Bambi Air Compressor is a precision engineered product.
By following these simple steps, you will ensure years of trouble-free use.

Parts & Service are available from your Bambi dealer.

It is important to quote model, type and serial number in all communications.

The substitution of parts not manufactured nor approved by Bambi can impair performance, service life and create potential mechanical or personal hazards and invalidate your warranty.

Bambi reserves the right to modify the contents of this operating booklet without notice and the information is in no way binding on the company.

02. Range overview

	PT5	PT15
Free air delivery @5 Bar	75 L/Min	75 L/Min
Motor power	1.0 HP / 0.75 kW	1.0 HP / 0.75 kW
Tank size	4 Ltr	15 Ltr

	PT24	PTH24
Free air delivery @5 Bar	75 L/Min	75 L/Min
Motor power	1.0 HP / 0.75 kW	1.0 HP / 0.75 kW
Tank size	24 Ltr	24 Ltr

	PT50	PT90
Free air delivery @5 Bar	150 L/Min	225 L/Min
Motor power	2.0 HP / 1.5 kW	3.0 HP / 2.25 kW
Tank size	50 Ltr	90 Ltr

Please refer to our website for free air delivery at varying pressures

03. UK declaration of conformity

Bambi Air Limited

152 Thimble Mill Lane, Heartlands, Birmingham, B7 5HT, United Kingdom
T: +44 121 322 2299 | **E:** sales@bambi-air.co.uk

UK Declaration of Conformity - Déclaration de Conformité UK - UK Konformitätserklärung - Declaración de Conformidad UK - UK Verklaring van Overeenstemming

Bambi Air Limited declares that this product conforms to the UK Regulations listed below.

Bambi Air Limited déclare que ce produit est conforme aux réglementations du Royaume-Uni énumérées ci-dessous.

Bambi Air Limited declara que este producto cumple con las regulaciones del Reino Unido que se enumeran a continuación.

Bambi Air Limited verklaart dat dit product voldoet aan de onderstaande regelgeving van het Verenigd Koninkrijk.

Bambi Air Limited erklärt hiermit, dass dieses Produkt den nachstehend aufgeführten Vorschriften des Vereinigten Königreichs entspricht.

Supply of Machinery (Safety) Regulations 2008; Pressure Equipment (Safety) Regulations 2016; Simple Pressure Vessels (Safety) Regulations 2016; Electromagnetic Compatibility Regulations 2016; Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, as amended.

EN 1012-1:2010; EN 60947-4-1:2019; EN 60204-1:2018; EN 61000-6-2:2019; EN 61000-6-4:2019; EN IEC 61000-3-2:2019 + A1:2021; EN 61000-3-3:2013 + A1:2019 + A2:2021; EN ISO 12100:2010; EN ISO 13857:2019; EN IEC 60034-1:2022.

IF NO SERIAL NUMBER HERE THEN HANDBOOK ISSUED AS REPLACEMENT OR WITH SERVICE KIT

Ben Suquet
Director

04. EU declaration of conformity

Bambi Air Limited

152 Thimble Mill Lane, Heartlands, Birmingham, B7 5HT, United Kingdom
T: +44 121 322 2299 | **E:** sales@bambi-air.co.uk

CE

EC Declaration of Conformity - Déclaration de Conformité CE - EG Konformitätserklärung - Declaración de Conformidad CE - EG Verklaring van Overeenstemming

Bambi Air Limited declares that this product conforms to the European Directives listed below.

Bambi Air Limited déclare que ce produit est conforme aux directives européennes énumérées ci-dessous.

Bambi Air Limited declara que este producto cumple con la Directivas Europeas enumeradas a continuación.

Bambi Air Limited verklaart dat dit product voldoet aan de onderstaande Europese Richtlijnen.

Bambi Air Limited erklärt hiermit, dass dieses Produkt den nachstehenden EU-Richtlinien entspricht.

Machinery Directive 2006/42/EC; Electromagnetic Compatibility Directive 2014/30/EU; Simple Pressure Vessels Directive 2014/29/EU; Pressure Equipment Directive 2014/68/EU; RoHS Directive 2011/65/EU, as amended by Directive (EU) 2015/863.

EN 1012-1:2010; EN 60947-4-1:2019; EN 60204-1:2018; EN 61000-6-2:2019; EN 61000-6-4:2019; EN IEC 61000-3-2:2019 + A1:2021; EN 61000-3-3:2013 + A1:2019 + A2:2021; EN ISO 12100:2010; EN ISO 13857:2019; EN IEC 60034-1:2022.

Ben Suquet
Director

05. Warranty

Provided the operating instructions have been followed and the compressor has been properly maintained, Bambi PT compressors are guaranteed against faulty workmanship for a period of 12 months from the date of purchase. This warranty is strictly conditional on the completion of all preventative maintenance as detailed in the product handbook. Maintenance must be carried out in accordance with the advised schedule, or sooner, depending on usage frequency. Failure to perform the required maintenance will result in the warranty being void. This warranty does not cover damage caused by misuse, the use of non genuine Bambi parts or modifications.

06. Preventative maintenance

Maintenance operations	Weekly	Annually
Drain air receiver	✓	
Replace air intake filter		✓
Check pressure relief activation		✓
Check piston ring		✓
Clean ventilation grilles		✓

07. Technical specification

PT5 Specification	Single phase / 110V, 50Hz	110V, 60Hz
Motor Power	1.0 HP / 0.75 kW	1.0 HP / 0.75 kW
Max Pressure	8 Bar	8 Bar
Noise Level [1]	67 dB(A)	67 dB(A)
Current	2.7 Amps / 6.8 Amps	6.8 Amps
Voltage	220-240V / 110V-50 Hz	110V
Connection	UK plug [2]	UK plug [2]
Weights	17 kg	17 kg
Dimensions	34 x 40 x 33 cm	34 x 40 x 33 cm
Frequency	50 Hz	60 Hz
Displacement @ 5 Bar	75L/min	75L/min
Tank size	4 Ltr	4 Ltr

[1] Independently tested by TÜV SÜD
[2] EU plug available upon request

PT15 Specification	Single phase / 110V, 50Hz	110V, 60Hz
Motor Power	1.0 HP / 0.75 kW	1.0 HP / 0.75 kW
Max Pressure	8 Bar	8 Bar
Noise Level [1]	72 dB(A)	72 dB(A)
Current	2.7 Amps / 6.8 Amps	6.8 Amps
Voltage	220-240V / 110V-50 Hz	110V
Connection	UK plug [2]	UK plug [2]
Weights	23 kg	23 kg
Dimensions	53 x 37 x 37 cm	53 x 37 x 37 cm
Frequency	50 Hz	60 Hz
Displacement @ 5 Bar	75 L/min	75 L/min
Tank size	15 Ltr	15 Ltr

PT24 Specification	Single phase / 110V, 50Hz	110V, 60Hz
Motor Power	1.0 HP / 0.75 kW	1.0 HP / 0.75 kW
Max Pressure	8 Bar	8 Bar
Noise Level [1]	74 dB(A)	74 dB(A)
Current	2.7 Amps / 6.8 Amps	6.8 Amps
Voltage	220-240V / 110V-50 Hz	110V
Connection	UK plug [2]	UK plug [2]
Weights	25 kg	25 kg
Dimensions	57 x 40 x 40 cm	57 x 40 x 40 cm
Frequency	50 Hz	60 Hz
Displacement @ 5 Bar	75 L/min	75 L/min
Tank size	24 Ltr	24 Ltr

[1] Independently tested by TÜV SÜD
[2] EU plug available upon request

PTH24 Specification	Single phase / 110V, 50Hz	110V, 60Hz
Motor Power	1.0 HP / 0.75 kW	1.0 HP / 0.75 kW
Max Pressure	8 Bar	8 Bar
Noise Level (1)	74 dB(A)	74 dB(A)
Current	2.7 Amps / 6.8 Amps	6.8 Amps
Voltage	220-240V / 110V-50 Hz	110V
Connection	UK plug (2)	UK plug (2)
Weights	27 kg	27 kg
Dimensions	56 x 65 x 25 cm	56 x 65 x 25 cm
Frequency	50 Hz	60 Hz
Displacement @ 5 Bar	75 L/min	75 L/min
Tank size	24 Ltr	24 Ltr

PT50 Specification	Single phase / 110V, 50Hz	110V, 60Hz
Motor Power	2.0 HP / 1.5 kW	2.0 HP / 1.5 kW
Max Pressure	8 Bar	8 Bar
Noise Level (1)	67 dB(A)	67 dB(A)
Current	5.4 Amps / 13.6 Amps	13.6 Amps
Voltage	220-240V / 110V-50 Hz	110V
Connection	UK plug (2)	UK plug (2)
Weights	44 kg	44 kg
Dimensions	62 x 88 x 34 cm	62 x 88 x 34 cm
Frequency	50 Hz	60 Hz
Displacement @ 5 Bar	150 L/min	150 L/min
Tank size	50 Ltr	50 Ltr

(1) Independently tested by TÜV SÜD
(2) EU plug available upon request

PT90 Specification	Single phase
Motor Power	3.0 HP / 2.25 kW
Max Pressure	8 Bar
Noise Level [1]	72 dB(A)
Current	8.1 Amps
Voltage	220-240V
Connection	UK plug [2]
Weights	85 kg
Dimensions	76 x 104 x 43 cm
Frequency	50 Hz
Displacement @ 5 Bar	225 L/min
Tank size	90 Ltr

[1] Independently tested by TÜV SÜD
[2] EU plug available upon request

08. Electrical connections

Where applicable, compressors are supplied with a moulded plug in accordance with national standards. Never remove the moulded plug. Ensure the machine is connected to a fused electrical circuit with a breaker. The use of extension cables is not recommended as this may cause voltage drops which can result in damage to the motor. If required, fit a separate emergency stop button for additional safety precautions.

Models		50Hz	60Hz
	Wired in accordance with	European standard	US standard
Wiring		Blue = Neutral	White = Neutral
		Brown = Live	Black = Live
		Yellow/Green = Earth	Green = Earth

09. Installation instructions

What you MUST do:

- ✓ Read these instructions before using your air compressor.
- ✓ Ensure the compressor has been installed, electrically connected and piped in by a properly qualified person.
- ✓ Connections from the compressor outlet should be made in flexible pipe.
- ✓ Ensure the compressor is kept upright at all times.
- ✓ Site the compressor level in both planes.
- ✓ Use ear protection when in close proximity to the compressor.
- ✓ Allow access for maintenance all around the compressor (min 30cm).
- ✓ Site in a dry area, avoiding damp or humid conditions. The site must be dust free, well-ventilated and have a cool ambient temperature. 0 to 40°C should be regarded as the minimum and maximum allowable ambient.
- ✓ Provide adequate protection from the weather.

What you MUST NOT do:

- ✗ Do not attempt any maintenance on the compressor until it has been isolated from the power supply.
- ✗ Do not attempt any work on the compressor until the air receiver and pipe work systems are depressurised.
- ✗ Never tamper with the pressure relief valve.
- ✗ Compressed air is dangerous if misused and can prove fatal. Avoid any bodily contact with compressed air.
- ✗ During operation the motor will become quite hot to the touch. Avoid contact to prevent burns.
- ✗ Do not enclose the compressor or allow hot air generated by the motor to recirculate around the compressor.
- ✗ Do not restrict air flow around the end cover ventilation grilles.
- ✗ Do not site in a potentially explosive atmosphere without the necessary additional precautions being made.
- ✗ Do not obstruct cooling fans or outlet vents.
- ✗ Do not lubricate the oil free compressor assembly – will cause severe damage.
- ✗ Do not run the machine without the air inlet filter being fitted.

IMPORTANT!

These compressors generate heat. Never restrict any of the ventilation grilles otherwise serious damage may occur.

10. Operation

Refer to exploded parts diagrams and illustrations in sections 13-17 (depending on model) when reading this. Flexible airline should be fitted to the regulator outlet.

We recommend the compressor has a maximum 65% duty cycle to prolong pump life.

The motor must never be allowed to run continuously, otherwise it will overheat and may become damaged. The duty cycle is calculated over 10 minutes, meaning that if the motor runs for 6.5 minutes it must rest for 3.5 minutes before its next use.

All air connections must be leak free to prevent the compressor from overheating. The compressor is fitted with a thermal overload. In the event of excessive temperature, the motor will switch off. After about 50 minutes when the motor has cooled it will automatically reset.

You must find the cause of the overload and rectify it before continuing to use the compressor. Damage by continuing to use the unit is not covered under warranty.

A. STARTING & STOPPING

Plug the compressor into an outlet socket of nominal voltage and fitted with the correct fuse as shown in section 8, Electrical Connections.

Switch the compressor on by turning the control switch on top of the pressure switch to the "AUTO" position.

The compressor will start running and automatically switch off at the pre-set pressure. The pump will turn on automatically when pressure drops low enough.

Pressure switch

Each time the compressor switches off, you will hear a short hiss of air. You are hearing the unloader valve discharging the residual delivery pipe pressure. This is normal.

NEVER unplug the compressor when running. Always switch off using the on/off control on the pressure switch to ensure the compressor discharges.

B. ADJUSTING OUTLET PRESSURE

Use the pressure regulator to adjust the outlet pressure.

To increase line pressure, rotate the knob in a clockwise direction; to decrease turn anti clockwise. It is possible to lock the setting by pushing the knob down until it "clicks".

There are two pressure gauges on each model.

The larger gauge indicates the air receiver pressure, the smaller gauge indicates the air outlet pressure.

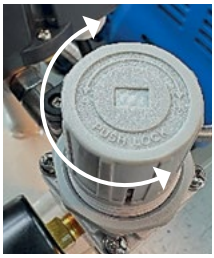

Pressure regulator

11. Routine maintenance

Below are steps on how to perform routine maintenance on your machine, as detailed in "06. Preventative Maintenance". Failure to perform these maintenance activities in line with the advised timetable (or sooner depending on frequency of usage) will result in your warranty being void.

Drain valve

A. DRAINING THE AIR RECEIVER

Drain condensate from air receiver at a pressure of no more than 2 Bar. Slowly open the drain tap provided to allow condensate to flow out. Fully close drain tap when all condensate has drained off.

Filter regulator

B. DRAINING THE FILTER REGULATOR UNIT

Slowly open the drain screw at the bottom of the bowl to allow condensate to flow out. Close the drain screw when all the condensate has drained off.

Condensate must be handled in accordance with national environmental rules.

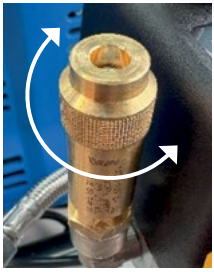

Pressure relief valve

C. CHECKING THE PRESSURE RELIEF VALVE (PRV)

Ensure the air receiver is not pressurised. Unscrew the knurled end of the pressure relief valve until an audible click is heard. Retighten without using excessive force.

If no click is heard, the pressure relief valve may need to be replaced.

12. PT pump spares list

#	Description	Part No.
1	Cylinder head seal	BPB1250
2	Valve plate assembly	BPB1251
3	Cylinder	BPB1253
4	Piston ring	BPB1254
5	Airway tube, inc. O ring seal	BPB1252
6	Motor fan LH	BPB1255
7	Motor fan RH	BPB1264
8	Fan cover	BPB1256
x	Pump service kit + instructions	BPPT1

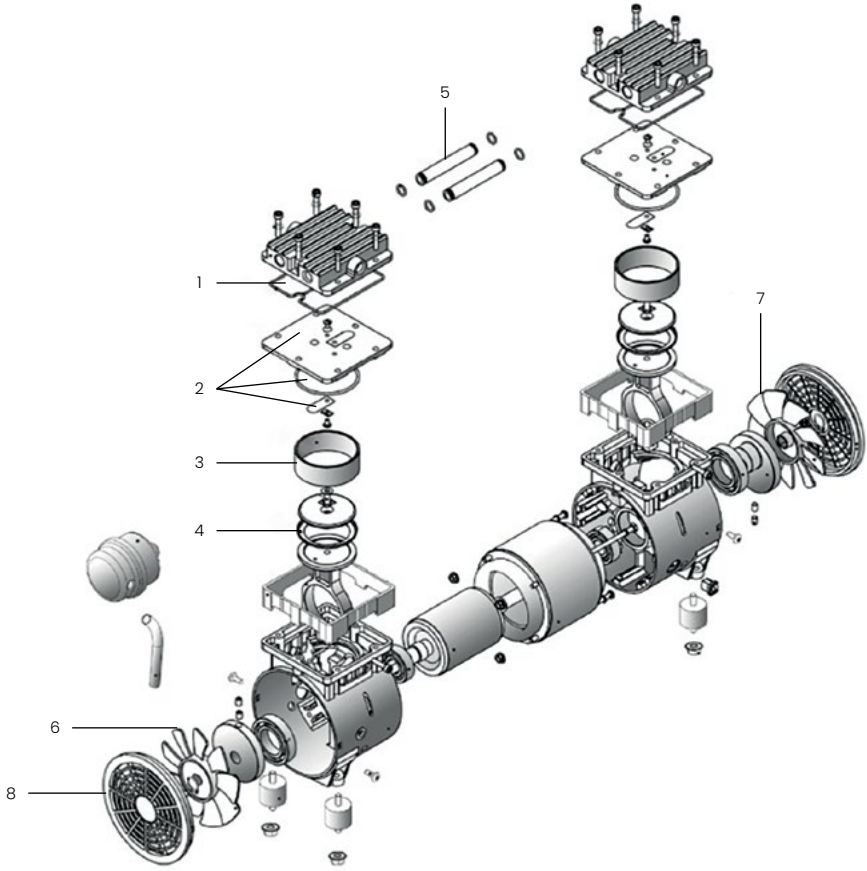

13. PT5 parts list

#	Description	Part No.
1	Pump	*
2	Pump filter	BPB1259
2a	Pump filter element	BPB1263
3	Non return valve	BPB1376
3a	Nut and olive	BPB1410
4	Air delivery pipe	BPB1258
5	Pump outlet elbow	BPB1257
6	Pressure relief valve	BPB1084
7	MF elbow	BPB1139
8	Pressure switch	BPB1074
9	50mm pressure gauge	BPB1081
10	MDR unloader valve	BPB1203

#	Description	Part No.
11	6mm black tube	BPB0203
12	1/4bsp adaptor	BPB1078
13	On/off valve	BPB1079
14	40mm pressure gauge	BPB1077
15	Filter regulator	BPB1080
15a	Filter regulator element	BPB1133
15b	Filter regulator bowl	BPBOWL
16	Compressor mounting foot	BPB1261
17	Frame foot	BPB1295
18	Drain valve & tube	BPB1294
19	Frame insert	BPB0078
20	Capacitor - 20mfd	BPB1260

* BPPTPUMP240V / BPPTPUMP 110 Volt 60 Hertz / BPPTPUMP 110 Volt 50 Hertz

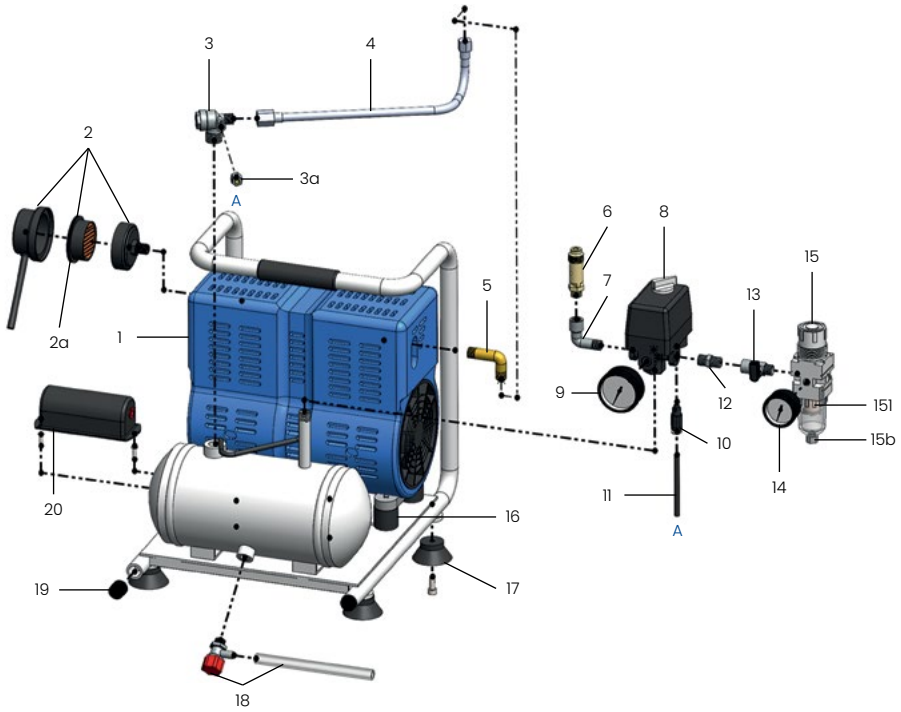

14. PT15 / PT24 parts list

#	Description	Part No.
1	Pump	*
2	Pump filter	BPB1259
2a	Pump filter element	BPB1263
3	Pressure relief valve	BPB1084
4	1/4 MF elbow	BPB1139
5	Pressure switch	BPB1074
6	MDR unloader valve	BPB1203
7	1/4bsp MF adaptor	BPB0810
8	1/4bsp adaptor	BPB1078
9a	15L vessel	BPB0470
9b	24L vessel	BPB0472
10	Vessel foot	BPB0247
11	Inspection plug seal	BPB0502
12	Inspection plug	BPB0243
13	Drain valve	BPB0895
14	Push-in tube fitting	BPB0043
15	50mm pressure gauge	BPB1081

#	Description	Part No.
16	1/4bsp MMF t-piece	BPB1095
17	On/off valve	BPB1079
18	40mm pressure gauge	BPB1077
19	Filter regulator	BPB1080
19a	Filter regulator element	BPB1133
19b	Filter regulator bowl	BPBOWL
20	Compressor mounting foot	BPB1261
21	1/4 x 3/8bsp adaptor	BPB0918
22	3/8 x M14 x 1/8 adaptor	BPB1300
23	1/8bsp plug	BPB0823
24	Non return valve	BPB0656
25	6mm black tube	BPB0203
26	6mm x 1/8bsp elbow	BPB0044
27	Air delivery pipe	BPB1258
28	Pump outlet elbow	BPB1257
29	Capacitor box	BPB1236
30	Capacitor - 20mfd	BPB1260

* BPPTPUMP240V / BPPTPUMP 110 Volt 60 Hertz / BPPTPUMP 110 Volt 50 Hertz

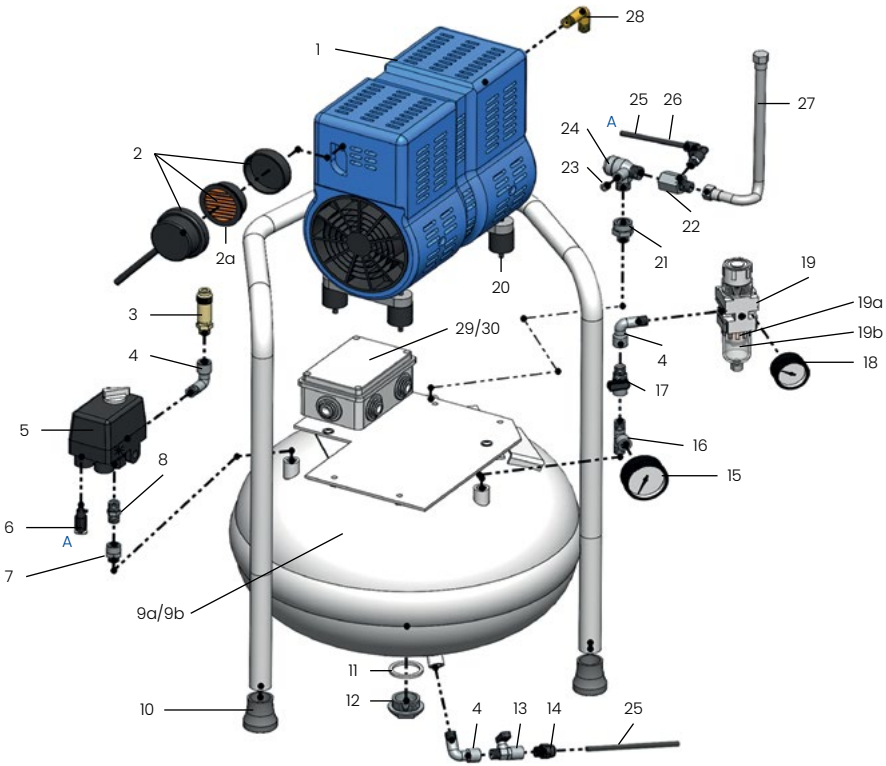
28
1
25
26
27
A
24
23
22
2
2a
21
20
19
19a
3
29/30
19b
4
4
18
17
5
16
8
15
6
A
7
9a/9b
11
12
10
4
13
14
25

15. PTH24 parts list

#	Description	Part No.
1	Pump	*
2	Pump filter	BPB1259
2a	Pump filter element	BPB1263
3	Capacitor box	BPB1236
3a	Capacitor - 20mfd	BPB1260
4	Inspection plug	BPB0243
5	Inspection plug seal	BPB0502
6	24L tank	BPB0473
7	Siphon tube	BPB0029
8	1/8bsp x 6mm elbow tube fitting	BPB0044
9	Hours run meter	BPB1402
10	Drain filter	BPB0606
11	6mm black tube	BPB0203
12	1/4bsp MFF t-piece	BPB1109
13	Pressure relief valve	BPB1084
14	1/4bsp MF adapter	BPB0810
15	Non return valve	BPB0656
16	1/8bsp plug	BPB0823
17	3/8bsp x M14 x 1/8bsp adaptor	BPB1300
18	6mm x 1/8bsp elbow	BPB0044

#	Description	Part No.
19	Air delivery pipe	BPB1258
20	Pump outlet elbow	BPB1257
21	Handle insert	BPB0076
22	40mm gauge	BPB1077
23	Filter regulator	BPB1080
23a	Filter regulator element	BPB1133
23b	Filter regulator bowl	BPBOWL
24	On/off valve	BPB1079
25	1/4bsp adaptor	BPB1078
26	Pressure switch	BPB0550
27	1/4bsp pressure plug	BPB0019
28	50mm gauge	BPB1081
29	Right angled unloader valve	BPB1205
30	1/4bsp hex extension	BPB0152
31	1/8bsp x 6mm push in tube fitting	BPB0154
32	1/8bsp silencer	BPB0588
33	Condensate bottle	BPB0088
34	1/8bsp AD timer & connector	BPB0819
35	Wheel kit (optional)	BPB0157

* BPPTPUMP240V / BPPTPUMP 110 Volt 60 Hertz / BPPTPUMP 110 Volt 50 Hertz

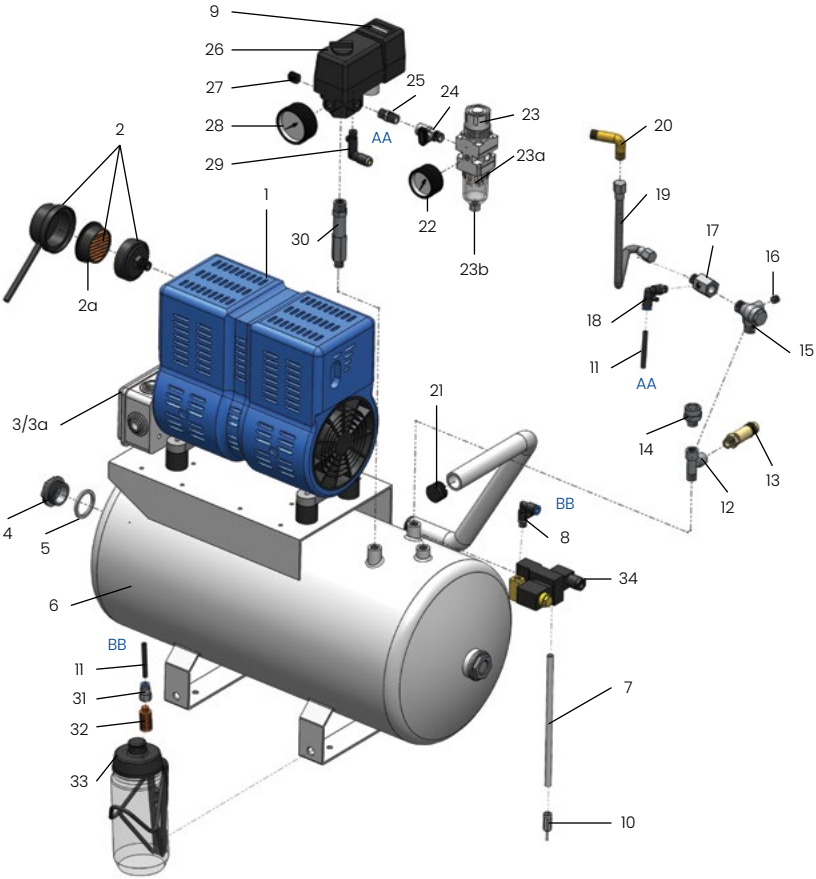
9
26
27
28
29
25
24
23
23a
22
23b
AA
2
2a
1
30
3/3a
4
5
6
BB
11
31
32
33
21
BB
8
34
7
10
20
19
17
16
18
15
11
AA
14
13
12
35

16. PT50 parts list

#	Description	Part No.
1	Pump	*
2	Pump filter	BPB1259
2a	Pump filter element	BPB1263
3	Compressor mounting foot	BPB1261
4	Inspection plug	BPB0243
5	Inspection plug seal	BPB0502
6	50L vessel	BPB0474
7	Vessel foot	BPB0259
8	Wheel kit (optional)	BPB0157
9	Handle insert	BPB0076
10	Siphon tube	BPB0034
11	1/4bsp MF elbow	BPB1139
12	Drain valve	BPB0895
13	Push-in tube fitting	BPB0043
14	Filter regulator	BPB1080
14a	Filter regulator element	BPB1133
14b	Filter regulator bowl	BPBOWL
15	40mm pressure gauge	BPB1077
16	On/off valve	BPB1079

#	Description	Part No.
17	1/4bsp adaptor	BPB1078
18	50mm pressure gauge	BPB1081
19	Pressure switch	BPB1074
20	Pressure relief valve	BPB1084
21	MDR unloader valve	BPB1203
22	1/4bsp hex extension	BPB0152
23	1/4 x 3/8bsp MF adaptor	BPB0918
24	Non return valve	BPB0656
25	1/8bsp plug	BPB0823
26	6mm black tube	BPB0203
27	6mm x 1/8bsp elbow	BPB0044
28	3/8 x M14 x 1/8 adaptor	BPB1300
29	Air delivery pipe	BPB1258
30	Pump outlet elbow	BPB1257
31	1/4bsp x M14 adaptor	BPB1242
32	1/4bsp female t-piece	BPB1239
33	Capacitor box	BPB1236
33a	Capacitor - 20mfd	BPB1260

* BPPTPUMP240V / BPPTPUMP 110 Volt 60 Hertz / BPPTPUMP 110 Volt 50 Hertz

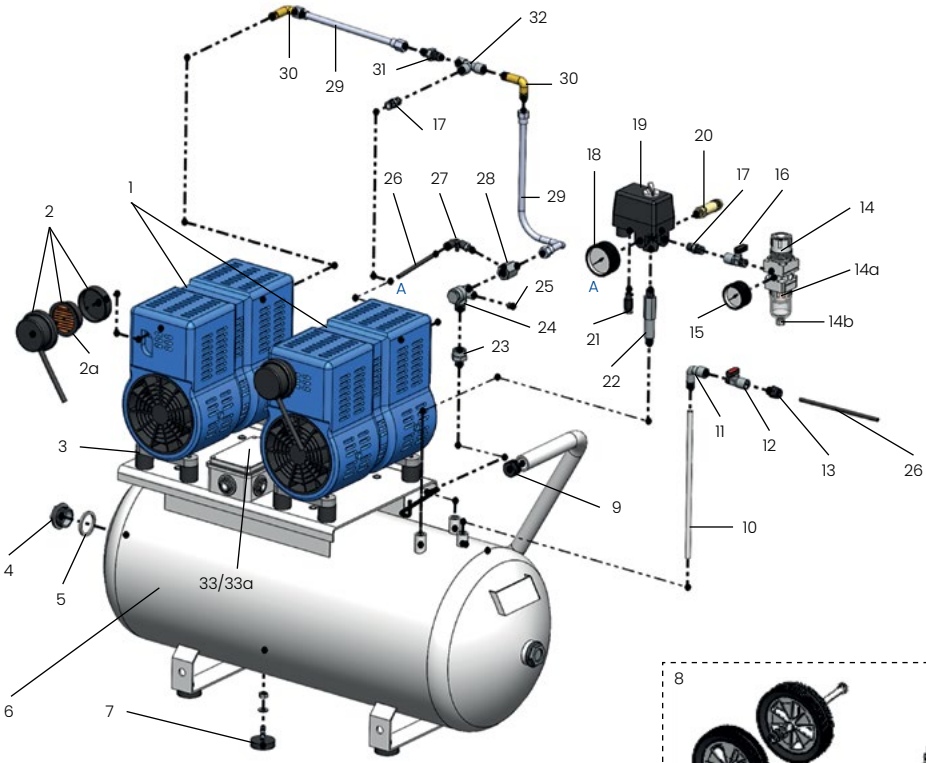
32
30
29
31
30
17
19
20
18
17
16
26
27
28
29
14
1
2
A
A
25
14a
24
15
14b
2a
23
21
22
11
12
13
26
3
9
10
4
5
33/33a
6
7
8

17. PT90 parts list

#	Description	Part No.
1	Pump	*
2	Pump filter	BPB1259
2a	Pump filter element	BPB1263
3	Compressor mounting foot	BPB1261
4	Inspection plug	BPB0243
5	Inspection plug seal	BPB0502
6	90L vessel	BPB1378
7	Drain valve	BPB0895
8	Push-in tube fitting	BPB0043
9	6mm black tube	BPB0203
10	6mm x 1/4bsp elbow	BPB0042
11	Vessel foot	BPB0259
12	Handle insert	BPB0076
13	50mm pressure gauge	BPB1081
14	1/4bsp hex extension	BPB0152
15	MDR unloader valve	BPB1203
16	Pressure relief valve	BPB1084
17	1/4bsp MF elbow	BPB1139

#	Description	Part No.
18	Pressure switch	BPB1074
19	1/4bsp adaptor	BPB1078
20	On/off valve	BPB1079
21	Filter regulator	BPB1080
21a	Filter regulator element	BPB1133
21b	Filter regulator bowl	BPBOWL
22	40mm pressure gauge	BPB1077
23	1/2 x 3/8bsp reducing bush	BPB1302
24	Non return valve	BPB0656
24a	1/8bsp plug	BPB0823
25	Solenoid valve with cable	BPB0545
26	6mm x 1/8bsp elbow	BPB0044
27	3/8 x M14 x 1/8 adaptor	BPB1300
28	Air delivery pipe	BPB1377
29	Pump outlet elbow	BPB1257
30	Wheel kit (optional)	BPB0157
31	Capacitor box	BPB1313
31a	Capacitor - 20mfd	BPB1260

BPPTPUMP240V / BPPTPUMP 110 Volt 60 Hertz / BPPTPUMP 110 Volt 50 Hertz

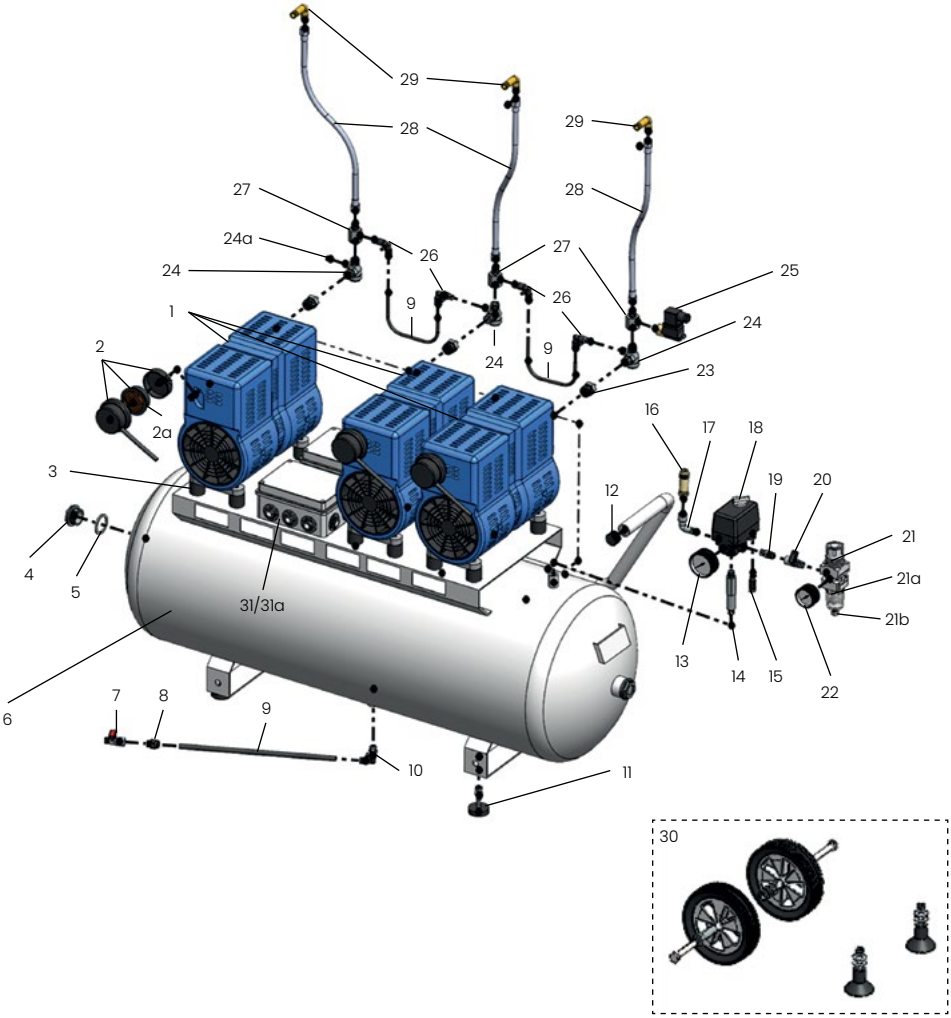
29
28
27
24a
24
26
9
1
2
2a
3
4
5
6
7
8
9
10
11
31/31a
24
26
27
29
28
25
24
9
23
16
17
18
19
20
21
21a
21b
12
13
14
15
22
30

18. Troubleshooting

THE COMPRESSOR DOES NOT TURN ON

Possible causes	Solutions
Wrong power supply	Check compressor is connected to the right voltage/frequency
Plug not turned on	Turn on plug
Pressure switch not turned on	Turn switch to on (auto) position
Already reached pressure	Compressor will turn back on when pressure in the tank drops out of the differential range
Capacitor blown	Replace capacitor
Thermal trip on motor	Wait for motor to cool down. Find reason motor was running hot (air leaks/undersized for application) and resolve

AIR IN TANK BUT NOTHING COMING OUT THE OUTLET

Possible causes	Solutions
Valve shut before the regulator	Open the valve
Regulator wound down too far so it stops flow	Turn regulator to increase pressure

AIR VENTING AFTER COMPRESSOR REACHES PRESSURE

Possible causes	Solutions
Air venting less than 10 seconds after pump turns off	This is head pressure being released and is normal
Air venting more than 10 seconds after pump turns off. NRV failed and air leaking backwards from tank	Replace NRV spring and seal

TAKES A LONG TIME TO GENERATE PRESSURE/UNABLE TO REACH PRESSURE

Possible causes	Solutions
Air leaks in system	Fix air leaks
Piston rings worn	Requires pump service
Motor windings damaged	Replace motor

For any fault not listed in this table, please contact Bambi Air directly for assistance.

19. Wiring diagrams

PT5, PT15, PT24, PTH24

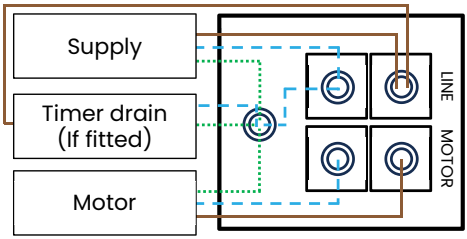

PT50

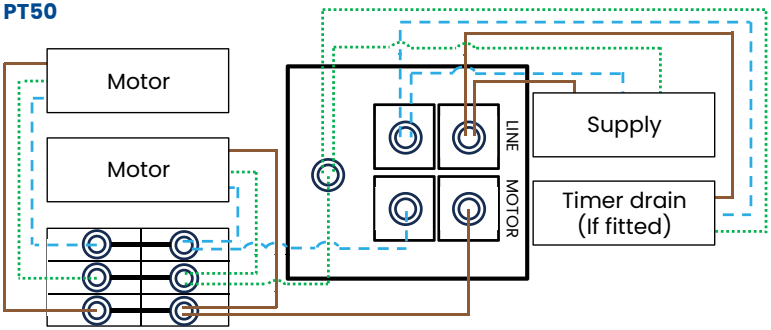

PT90

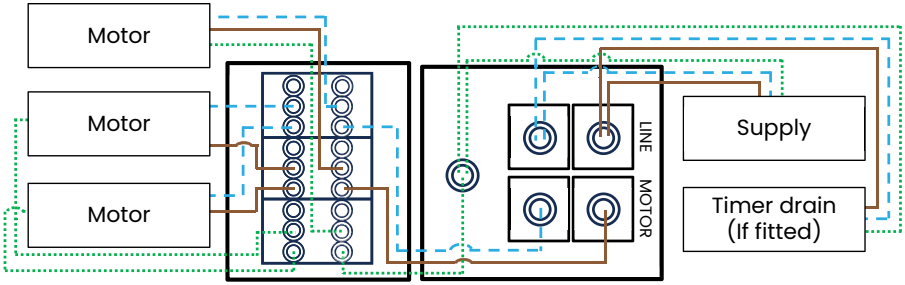

Live: ——— Neutral: - - - - Earth: ·····

Diagrams are of 50Hz models with European colours

60Hz wiring is the same with US Standard cable colours (see section 8)

Notes

Notes

All Bambi air compressors are designed, built and tested in the UK to ensure continuity across our product ranges and compliance with consumer quality standards.

MADE IN BRITAIN

bcas BRITISH COMPRESSED AIR SOCIETY LIMITED

Bambi Air Ltd

152 Thimble Mill Lane, Heartlands, Birmingham B7 5HT, United Kingdom

T: **+44 (0) 121 322 2299**
E: **sales@bambi-air.co.uk**

www.bambi-air.co.uk

Issue 8 – July 2026

BAMBI